


## NOR710 Perimeter Smoke Seal

Instructions for use with FD30 Fire Doors

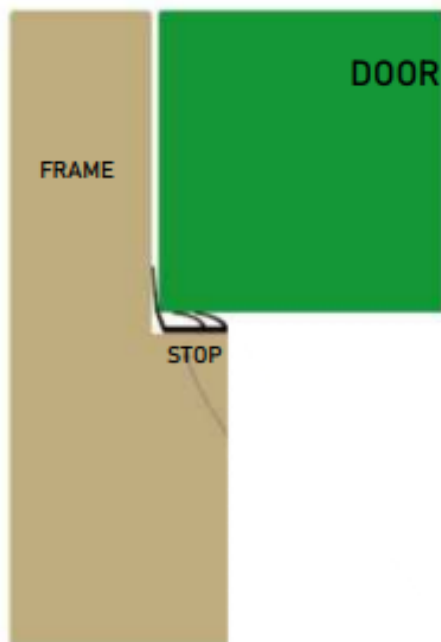

The NOR710 perimeter smoke seal must be fitted with the door fully opened with the frame completely free from dust and dirt.

Peel off the backing to reveal the adhesive edge.

Place the adhesive edge on the DOOR STOP. Ensure the seal is flush with the edge of the door stop.

The perimeter smoke / acoustic seal is activated by compression of the seal against the door face.

Fit the NOR710 seal from the top to the bottom of both sides, then fit the top / trim to size with a sharp edge.

Note: NOR710 should be fitted on site with door frame finished painted or varnished

